




Display Calculator

TR230

Easy Instructions

8 Digit display
1 Year limited warranty
Auto shut-off
Battery (1.5V LR54) included
Full function memory: M+/M-/MRC
Solar powered with battery backup

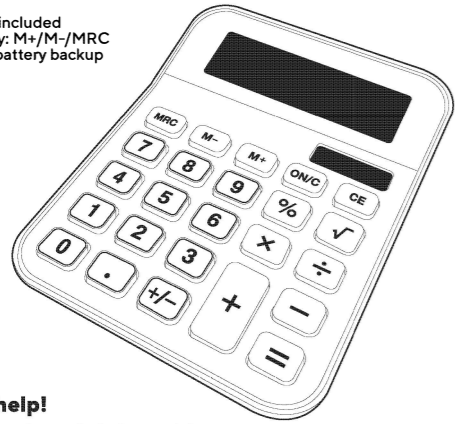

We're here to help!

Call our Product Support experts during weekday business hours: **1-800-270-9145**

Care and Maintenance

- Never use paint thinner, benzene, or other volatile agents to clean the calculator, as these materials will remove printed markings and damage the case.
- Use a soft, dry cloth to clean the exterior of the calculator.
- Clean the plastic parts with a mild soap and a damp cloth or sponge if needed.
- Never use liquids or abrasive cleaners to clean this product.
- To avoid damage to the product, do not immerse it in water or other liquids.

BEFORE USING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save this booklet for future reference.

IMPORTANT SAFEGUARDS

- To avoid product damage, do not store the product in, or expose it to, direct sunlight or excessively high temperatures for prolonged periods.
- To avoid damage to internal circuitry, do not expose the calculator to high humidity or dust.
- Never drop the calculator or subject it to strong impact.
- Never twist or bend the calculator. Avoid carrying the calculator in pockets, trousers, or tight-fitting clothing where it might be twisted or bent.
- Distributor is not responsible for any compensatory, consequential, or incidental damage that may result from use or misuse of this product.
- Do not immerse the product in water or other liquids.
- This product has no user-serviceable parts. To avoid damage to the calculator, do not attempt to open or disassemble it.
- To avoid damage to the product, do not press the keypad buttons with a ball point pen or other pointed object.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

To Operate

- To turn on the calculator, press the **ON/C** key.
- To clear an error during calculations, press the **CE** key once.
- To clear the display, press the **ON/C** key.
- The calculator will turn off after approximately seven minutes of inactivity.

Function Keys

- | | |
|---|----------------------------------|
| ON/C Turns unit on/ Clear Display. | √ Calculates Square Root. |
| CE Clear Entry. | ÷ Calculates Division. |
| M+ Adds display amount to memory. | - Calculates Subtraction. |
| M- Subtracts displayed amount from memory. | = Enables Summation. |
| MRC Recalls memory content. | |
| % Calculates Percentage. | |
| X Calculates Multiplication. | |
| + Calculates Addition. | |
| +/- Changes the displayed value to + to -. | |

Sample Calculations

ADDITION AND SUBTRACTION 123 + 456 - 789 = -210 ON/C 1 2 3 + 4 5 6 - 7 8 9 = Display -210	CONSTANT CALCULATION 5 X 6 = 30 5 X 7 = 35 ON/C 5 X 6 = 7 = Display 30 Display 35
MULTIPLICATION AND DIVISION (456 X 289) ÷ 123 = 1071.4146 ON/C 4 5 6 X 2 8 9 ÷ 1 2 3 = Display 1'071.4146	24 ÷ 12 = 2 54 ÷ 12 = 4.5 72 ÷ 12 = 6 ON/C 2 4 ÷ 1 2 = 5 4 ÷ 1 2 = 7 2 ÷ 1 2 = Display 2 Display 4.5 Display 6
ENTRY CORRECTION 12 x 2 = 24 ON/C 1 2 X 2 = Display 24	MEMORY CALCULATION (99 ÷ 4) - (2X3) = 18.75 ON/C 9 9 ÷ 4 = 2 X 3 = MRC MRC Display * 24.75 Display * 6 Display * 18.75 Display 18.75
MIXED CALCULATION (5 X 6 - 34) ÷ 2 + 8.27 = 6.27 ON/C 5 X 6 - 3 4 ÷ 2 + 8 . 2 7 = Display 6.27	
POWER CALCULATION 1.1 ⁴ = 1.4641 ON/C 1 . 1 X 1 . 1 X 1 . 1 X 1 . 1 = Display 1.4641	
PERCENT CALCULATION 5% of 246 = 12.3 ON/C 2 4 6 X 5 % = Display 12.3	
ADD-ON PERCENT CALCULATION 246 plus 5% = 258.3 ON/C 2 4 6 + 5 % = Display 258.3	PERCENT DISCOUNT CALCULATION 246 minus 5% = 233.7 ON/C 2 4 6 - 5 % = Display 233.7

Battery Handling and Usage

CAUTION: Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow the battery manufacturer's safety and usage instructions.
- Keep batteries away from children and pets.
- Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries.
- Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged batteries from the product. Remove the batteries when the product will not be used for extended periods of time.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Battery Disposal: Spent or discharged batteries must be properly disposed of and recycled in compliance with all applicable laws. For detailed information, contact your local solid waste authority.
- Save these instructions for future reference.

To Replace the Battery

1. Remove the screw in the battery compartment cover.
2. Open battery cover.
3. Remove spent button battery. Insert a fresh button cell (LR54 or equivalent) observing the proper polarity (+/-) with the "+" side up. Failure to properly align the battery polarity can cause personal injury and/or property damage.
4. Replace battery compartment cover and screw in place.

One (1) Year Limited Warranty

Worklife Brands, LLC ("Worklife Brands"), warrants to the original purchaser that this TRU RED calculator, except the battery, will be free from defects in material and workmanship under normal use for one (1) year from the date of purchase. Worklife Brands will either replace any defective Worklife Brands brand calculator free of charge with the same or similar model or refund 100% of the purchase price, at Worklife Brands' option.

To claim your replacement or refund, contact product support at 1-800-270-9145 from 8am to 8pm EST Monday - Friday (except holidays) Please retain the dated sales receipt as evidence of the date of purchase as it will be required for any warranty service.

This warranty will not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, repair or alternation. Without limiting the foregoing, battery leakage, bending of the unit, a broken tube, floppy drive recalibrations and any cracks in the LCD display will be presumed to have resulted from misuse or abuse.

IN NO EVENT WILL WORLIFE BRANDS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. SOME STATES, PROVINCES AND TERRITORIES DO NOT ALLOW THE EXCLUSION OF LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS. THIS WARRANT GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY DEPENDING UPON THE STATE, PROVINCE, TERRITORY OR COUNTRY. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.