



1 Locate and Drill holes for bottom Angle Brackets.

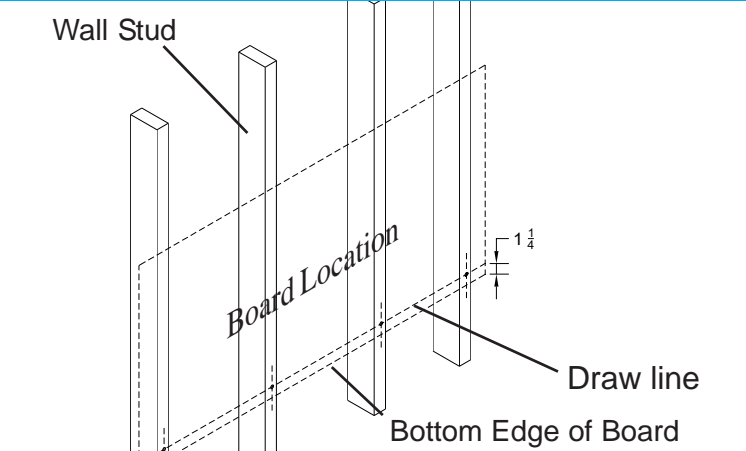


Determine board location. Measure from floor to the bottom edge of board. Mark with pencil line the corner location. Measure up from bottom edge of board 1-1/4", and draw line as shown. Locate stud near each end of board and drill pilot holes along line using 1/16" drill bit.

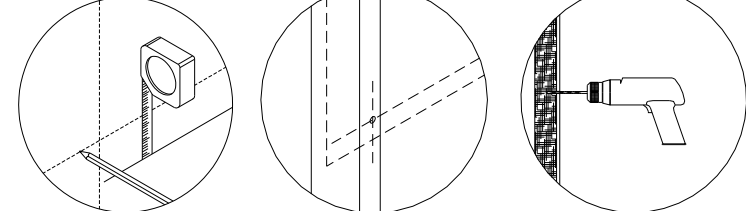



2 Attach bottom Angle Brackets.

**Note:**  
Install two Masonry Anchors (D) into 1/4" Diameter predrill holes for masonry walls.  
Install two Drywall Anchors (E) into 1/4" Diameter predrill holes for sheet rock walls.

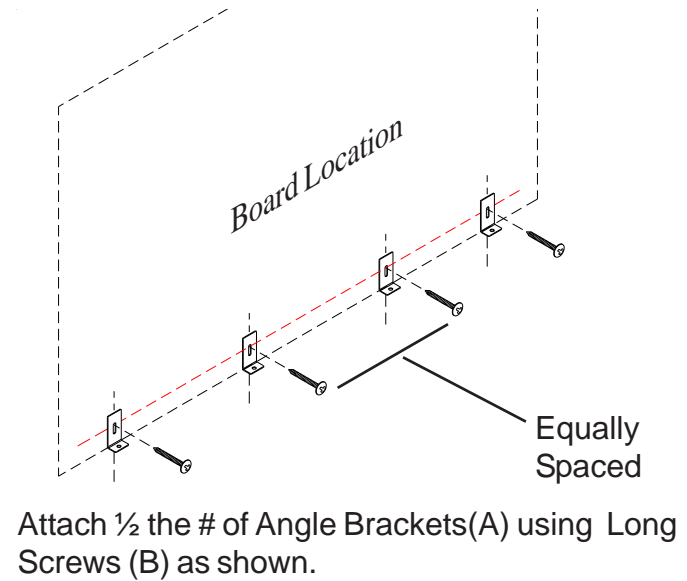


Attach 1/2 the # of Angle Brackets(A) using Long Screws (B) as shown.

3 Hang board and mark top.

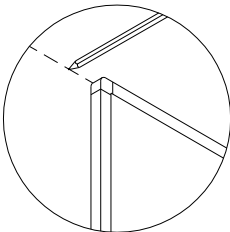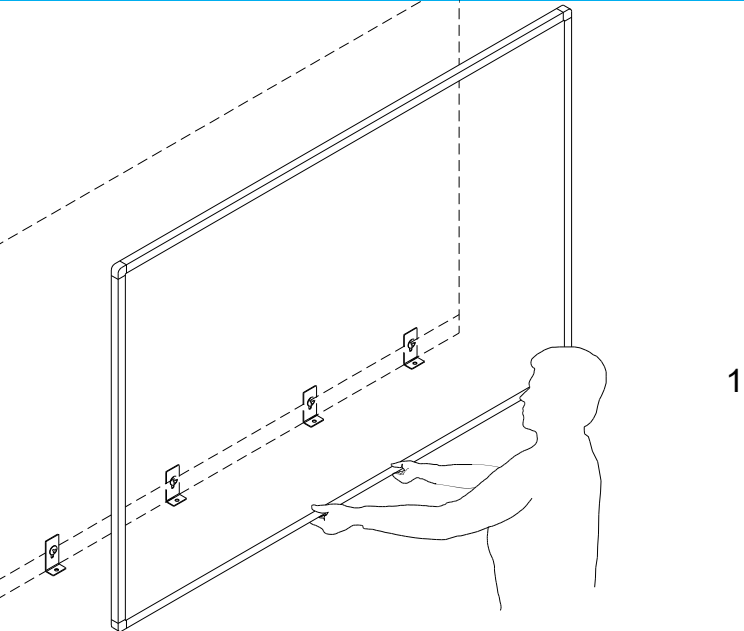


Set board on the Angle Brackets. Draw line along top edge of board.

4 Remove board and drill

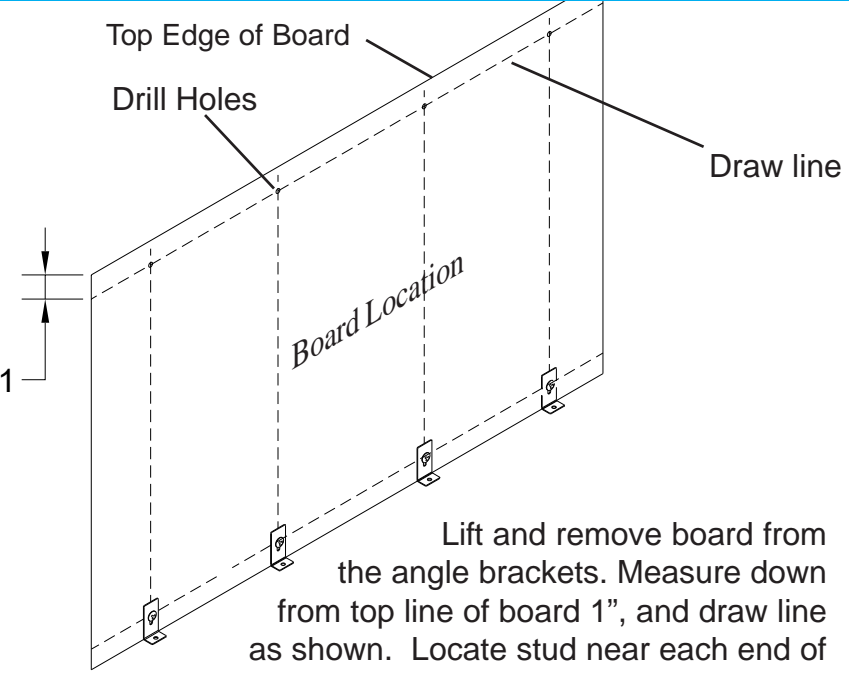


Lift and remove board from the angle brackets. Measure down from top line of board 1", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/16" drill bit.

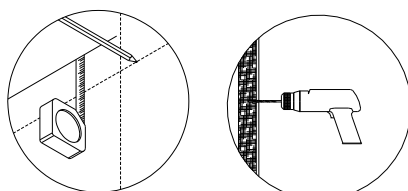


5 Attach top Angle Brackets and Hang board


**NOTE:** If your board has a tray, go to page 2 for tray mounting instructions.

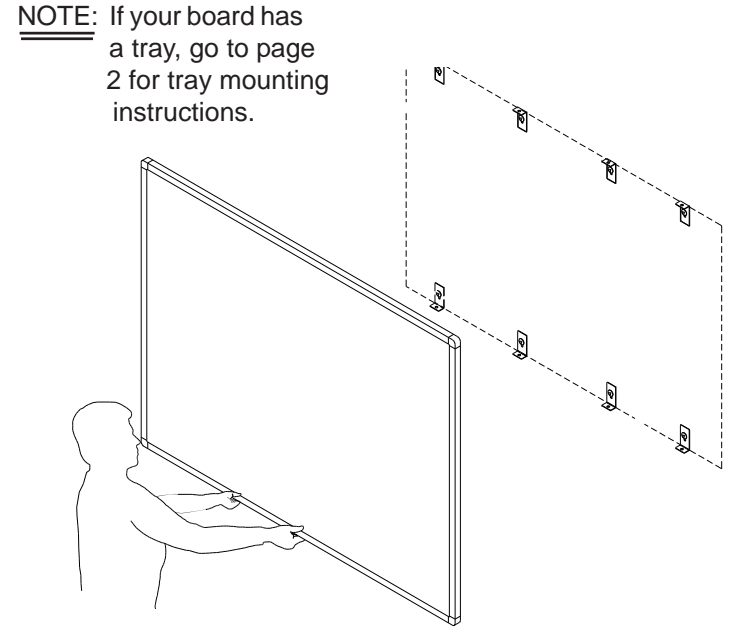

Secure top Angle Brackets (A) to the wall using Long Screws (B) as shown. Set board on the bottom angle brackets.

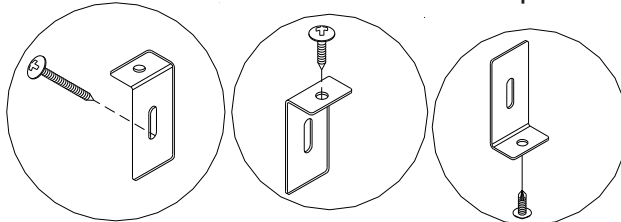

6 Secure Board

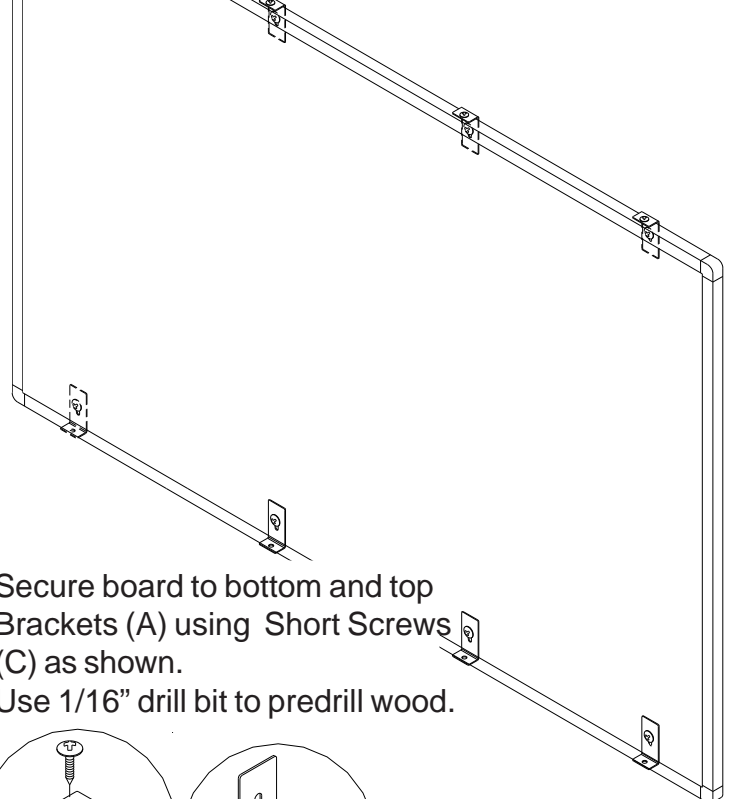

Secure board to bottom and top Brackets (A) using Short Screws (C) as shown. Use 1/16" drill bit to predrill wood.

**WARNING:**  
Failure to follow these installation instructions will void the warranty of the product.

Parts List

P1		Board	1 EA
----	--	-------	------

Hardware List


A		Angle Bracket	8 EA
B		Long Screw	8 EA
C		Short Screw	8 EA
D		Screw Anchor - Concrete	8 EA
E		Screw Anchor - Drywall	8 EA

HDWE-NL-W-518-L


Wood 12-17-12

Wood Boards

4' X 6', 4' X 8'

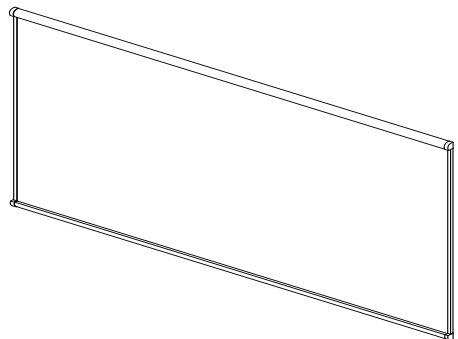


# For Boards with Trays

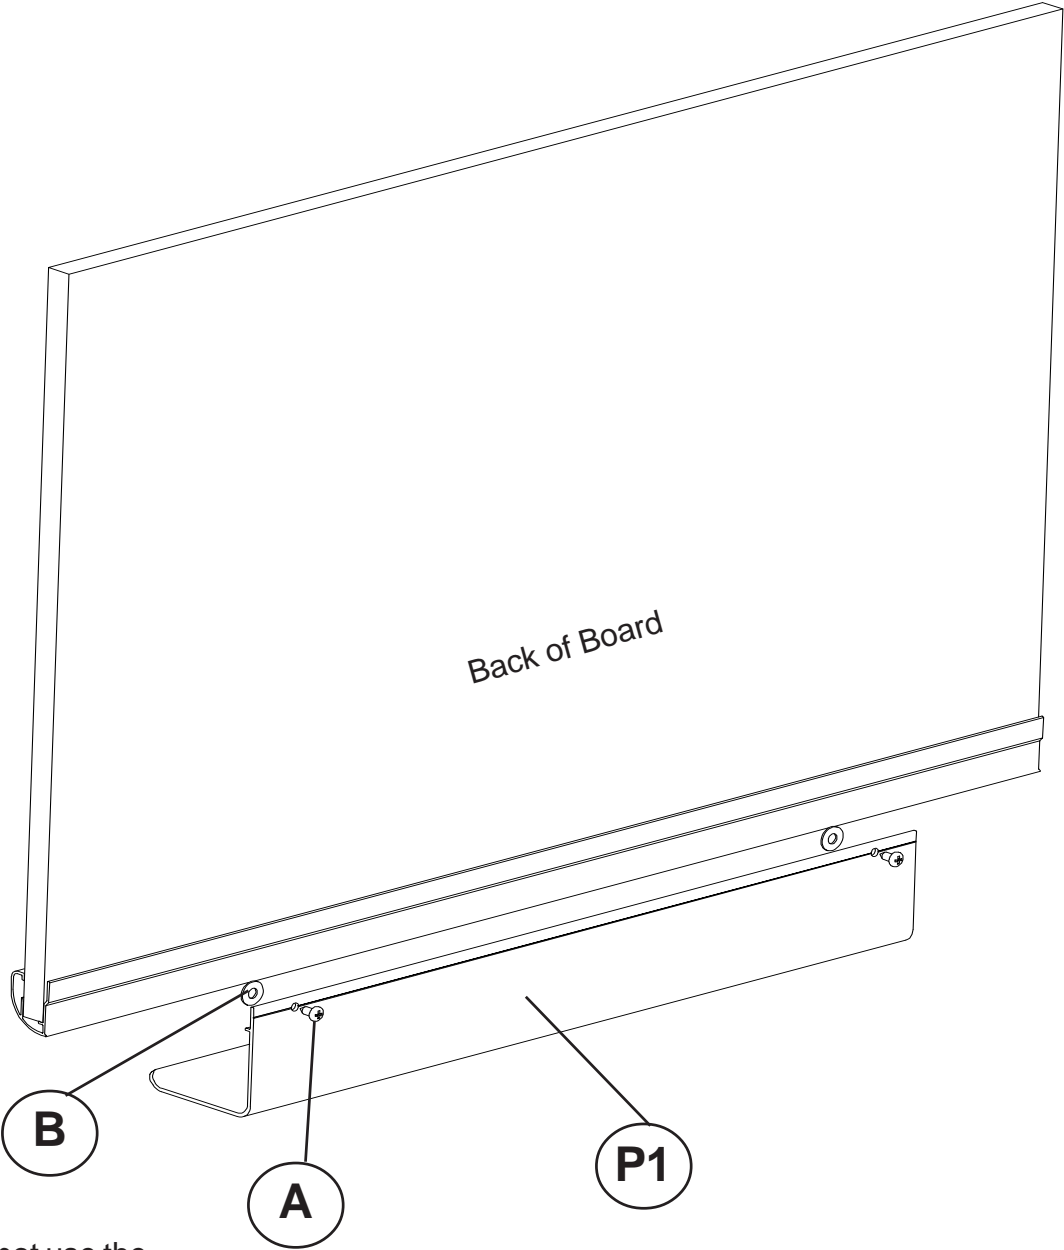


NOTE: Do not use the Washers (B) on Wood Trim Boards


1. Locate and mark the position of the Tray (P1) on the back of your board.
2. Place a Washer (B) between the Board and the Tray on each hole. **(On aluminum trim boards only)**
3. Use two Screws (A) to attach the Tray (P1) to the back of the Board.

Parts List

P1  Tray

Hardware List

A  Screw

B  Washer

## Markerboard/Tackboard with Tray

